



Installing PlayStation 2 Power Board

Written By: jwyoung




TOOLS:

- [Metal Spudger \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)
- [Phillips 00 Screwdriver \(1\)](#)

SUMMARY

Remove and replace your PlayStation 2's power board.

Step 1 — Top Cover

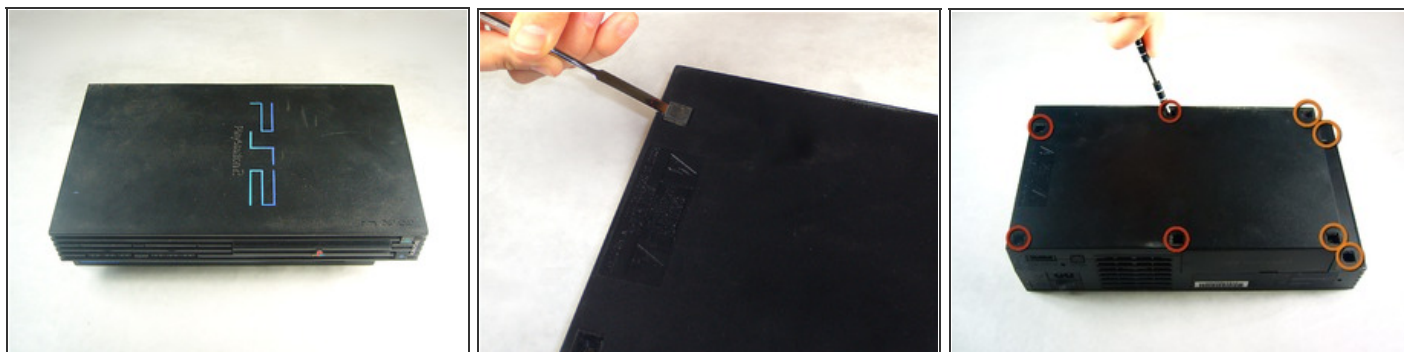

- Flip the PlayStation 2 over so it lays with the bottom of the device facing upwards.



- Use the flat edge of a metal spudger to pry the eight flat screw covers out.
- Remove the following eight screws securing the top cover to the bottom case:
 - Four 55.4 mm Philips screws
 - Four 18.0 mm Phillips screws


Step 2





- Peel the warranty sticker (located next to the main power switch) straight away from the case.
- To avoid activating the VOID that may come up, heat it carefully to remove and replace it clean


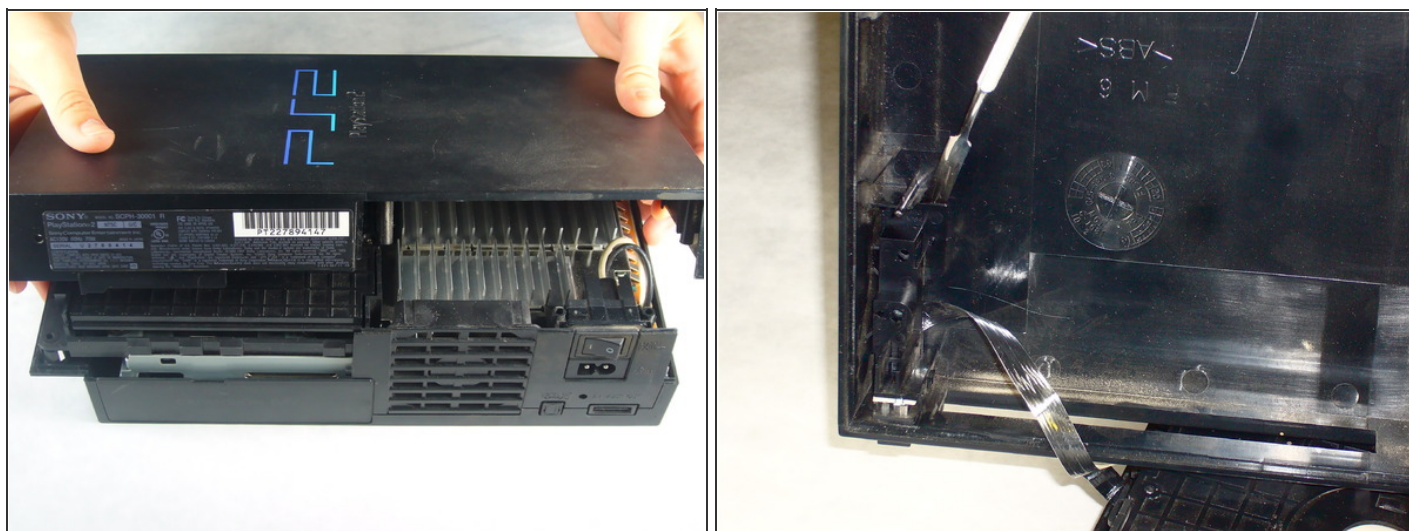


Step 3





- Flip the PlayStation 2 back to its original upside position. 
- Lift the top cover off the bottom case.
- To facilitate the removal, it is recommended to pry open the half closer to the power switch first while rocking the top cover towards the front of the bottom case. 
- Carefully remove the power cord that attaches the top and bottom halves by disconnecting the power cord assembly from the bottom case.

Step 4 — Power Board

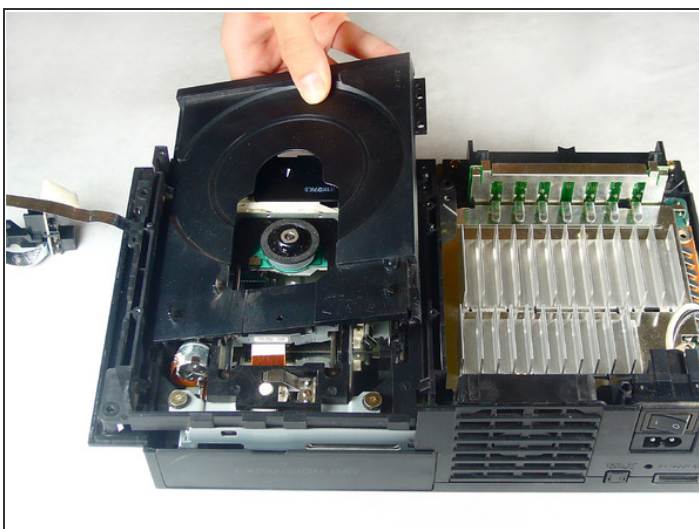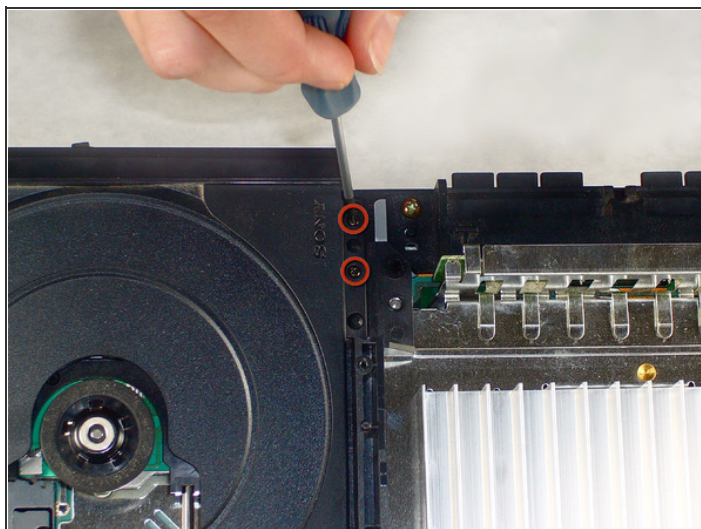


- Remove the two 6.4 mm black Phillips screws securing the optical disc drive to the bottom case.
- Lift and remove the optical disc drive straight up out of the bottom case.


Step 5

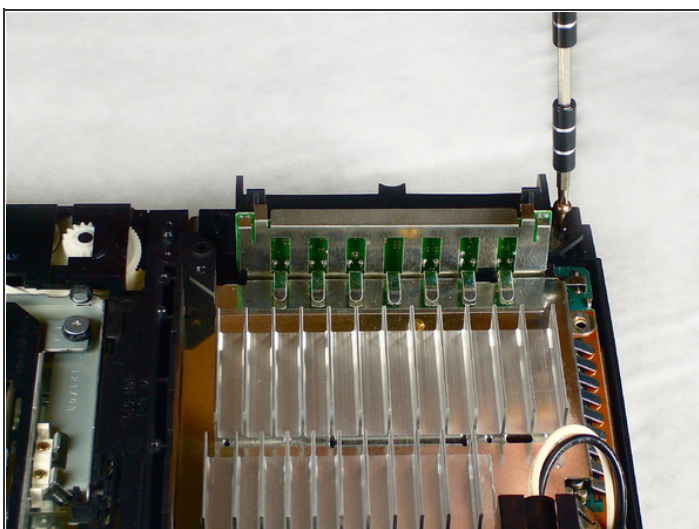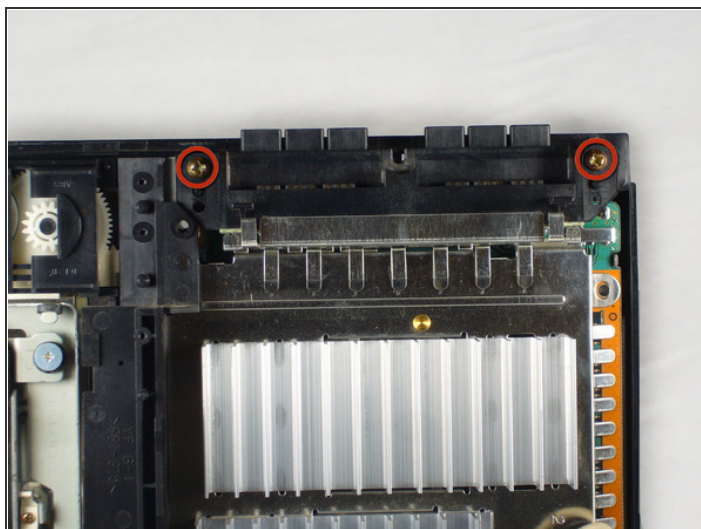


- Remove the two 14.6 mm gold-headed Phillips securing the controller ports to the bottom case.

Step 6

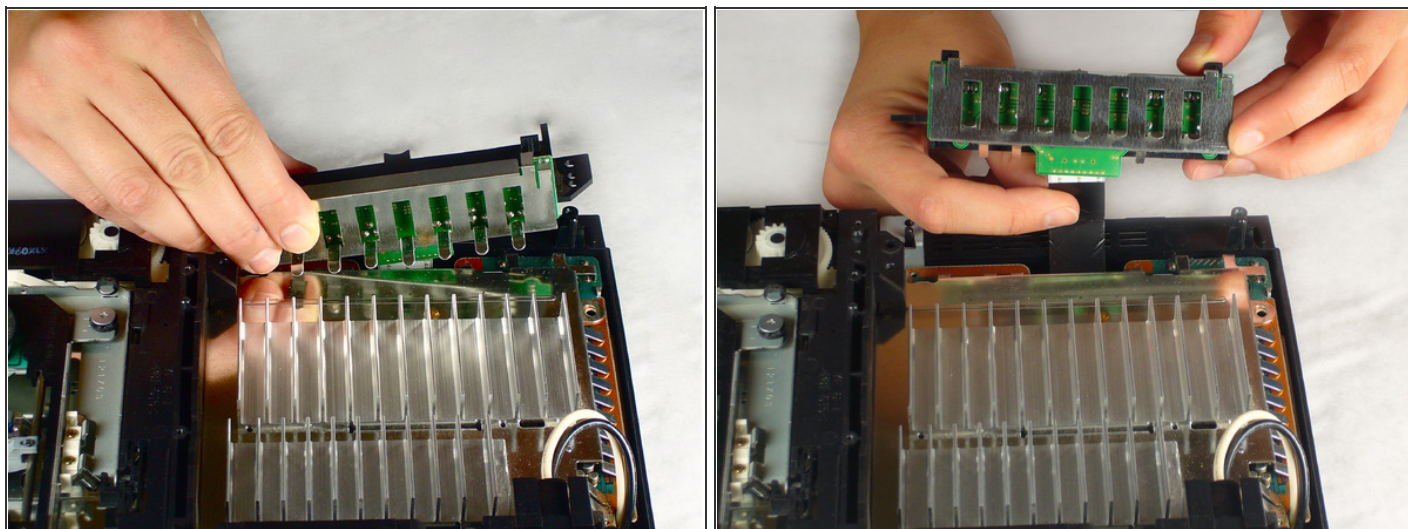


- Gently lift the controller port board out of its recess within the bottom case.
- Do not completely remove the controller port board. It is still attached via a ribbon cable. 
- Pull the controller port ribbon cable straight away from its socket on the controller port board.
- Remove the controller port board out of the bottom case.


Step 7

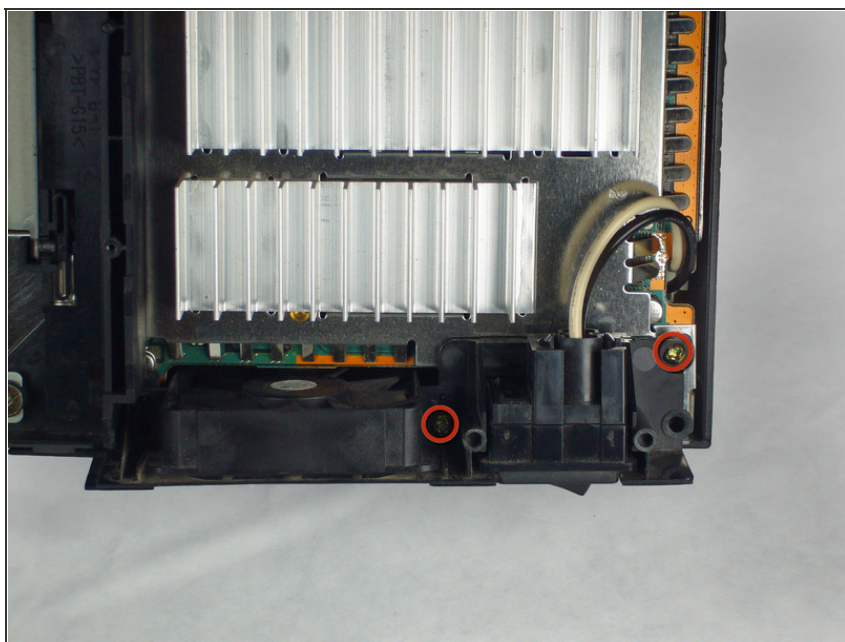


- Remove the two 14.6 mm gold Phillips screws securing the fan to the bottom case.

Step 8

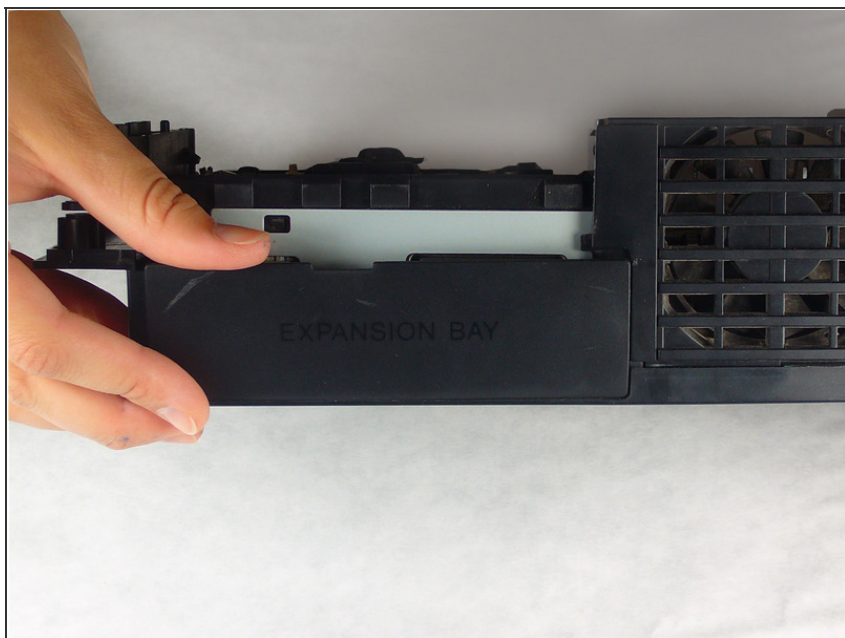


- If there is a device occupying the expansion bay, make sure to remove the device. The expansion base should be **empty**. 
- Pry and remove the expansion bay cover away from its posts on the bottom case.


Step 9

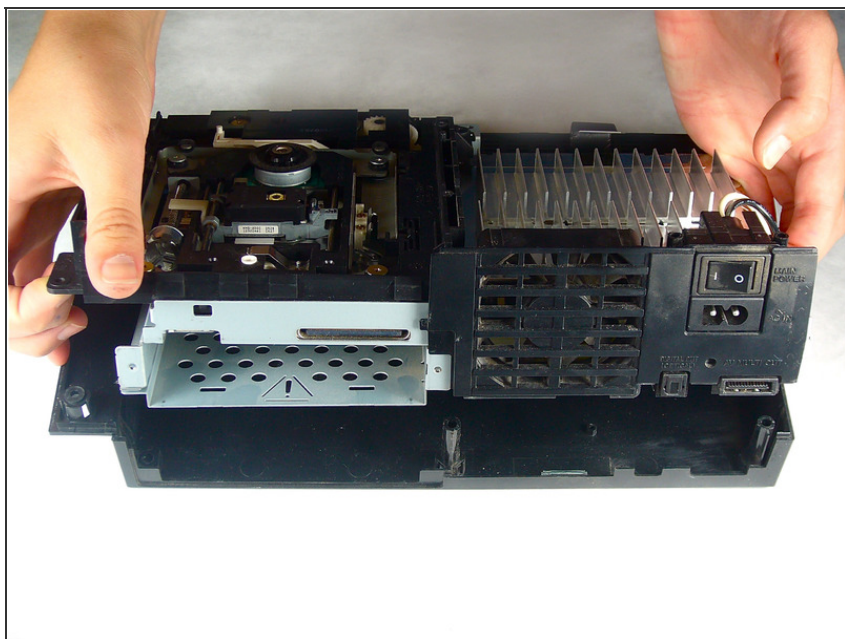


- Lift the motherboard assembly from its front edge and remove it from the lower case.

Step 10

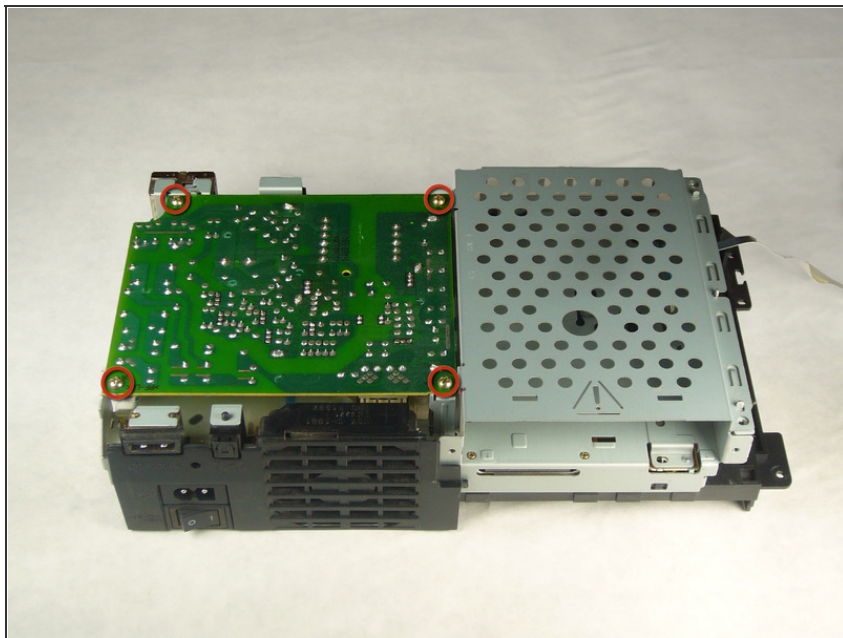


- Now that all of that bulky plastic is out of the way, we can get to the fun stuff - electronics! 
- Remove the four 7.6 mm gold-head Phillips securing the power supply to the motherboard assembly.

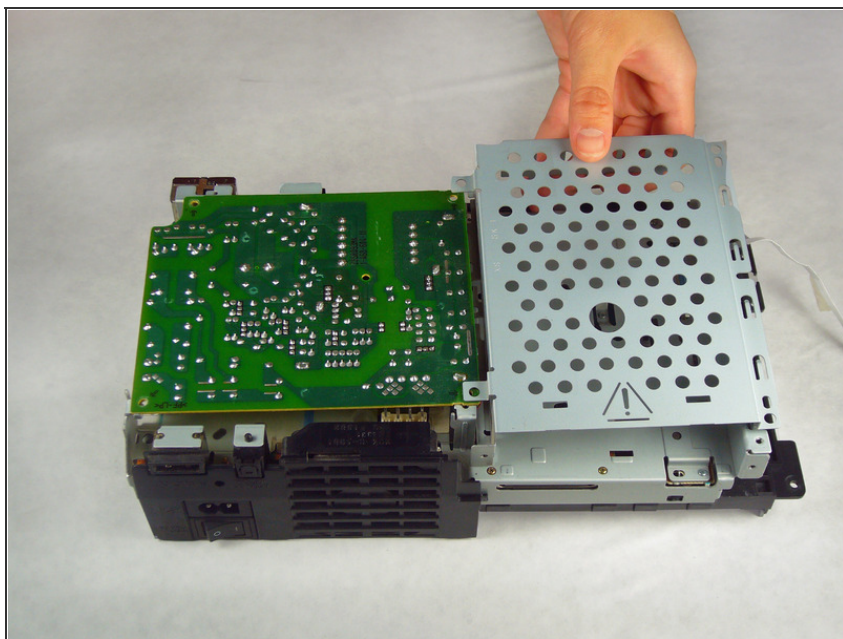

Step 11



- Lift the expansion bay cage up off the motherboard assembly.

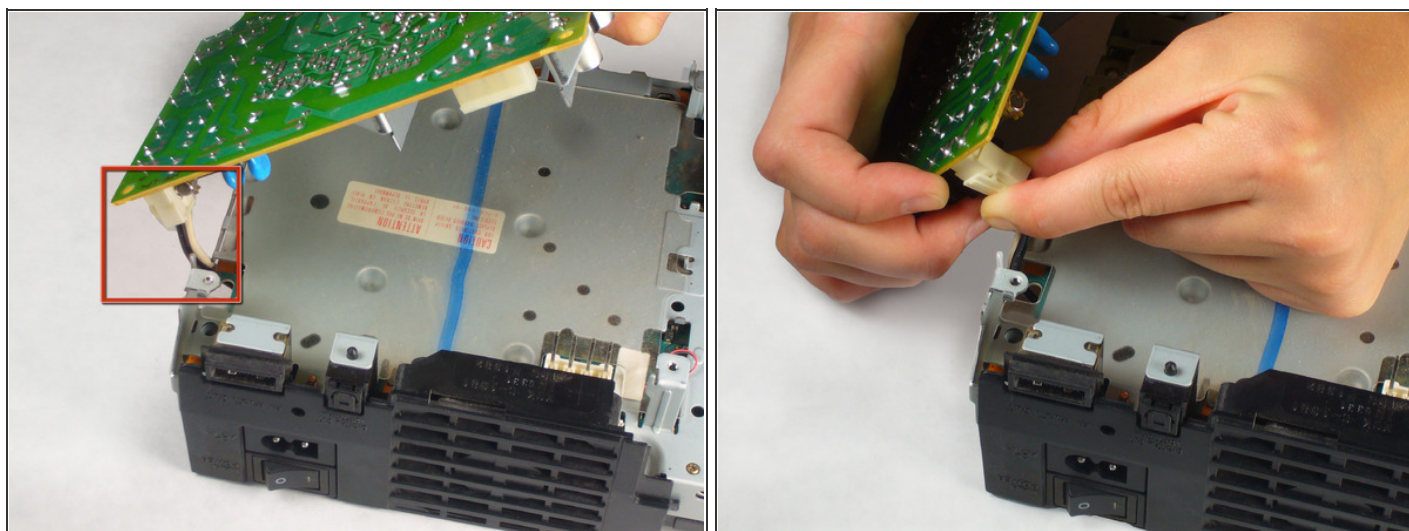Step 12



- Do not remove the power board yet. It is still attached to the motherboard assembly via the power board connector (highlighted in the first picture), which is located next to the main power switch. 
- Carefully lift the power board. You should now see the power board connector attached to the power board. 
- Pull the power board connector straight to lift it out of its socket on the power board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2012-10-31 07:54:24 PM.